

BOSE[®]

SOUNDDOCK[®] SERIES II

DIGITAL MUSIC SYSTEM

Owner's Guide

Guía de usuario



Notice d'utilisation

 



IMPORTANT SAFETY INSTRUCTIONS


Please read this owner's guide


Please take the time to carefully follow the instructions in this owner's guide. It will help you set up and operate your system properly and enjoy all of its advanced features. Please save this owner's guide for future reference.

-  **WARNING:** To reduce the risk of fire or electrical shock, do not expose the product to rain or moisture.
-  **WARNING:** Do not expose the apparatus to dripping or splashing, and do not place objects filled with liquids, such as vases, on or near the apparatus. As with any electronic product, use care not to spill liquids into any part of the system. Liquids can cause a failure and/or a fire hazard.

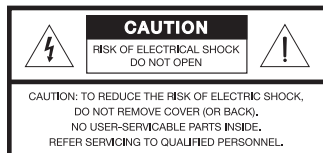

 The lightning flash with arrowhead symbol, within an equilateral triangle, alerts the user to the presence of uninsulated dangerous voltage within the system enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



 The exclamation point within an equilateral triangle alerts the user to the presence of important operating and maintenance instructions in this owner's guide.

-  **CAUTION:** Do not place any naked flame sources, such as lighted candles, on or near the apparatus.

NOTE: The product label is located on the bottom of the product.

NOTE: This product must be used indoors. It is neither designed nor tested for use outdoors, in recreation vehicles, or on boats.

NOTE: This product is intended to be used only with the power supply provided.

-  **WARNING:** Keep the remote control battery away from children. It may cause a fire or chemical burn if mishandled. Do not recharge, disassemble, heat above 100° C (212° F), or incinerate. Dispose of used batteries promptly. Replace only with a battery of the correct type and model number.
-  **WARNING:** Danger of explosion if battery is incorrectly replaced. Replace only with Duracell, Eveready, Energizer, Maxell, Toshiba, or Shun Wo CR2032 or DL2032 3-volt lithium battery.



Please dispose of used batteries properly, following any local regulations.



CAUTION: Make no modifications to the system or accessories. Unauthorized alterations may compromise safety, regulatory compliance, and system performance.



This product conforms to the EMC Directive 2004/108/EC and to the Low Voltage Directive 2006/95/EC. The remote control conforms to the RTTE Directive 99/5/EC. The complete Declaration of Conformity can be found at www.Bose.com/static/compliance/index.html.

NOTE: Where the mains plug or appliance coupler is used as the disconnect device, such disconnect device shall remain readily operable.

SoundDock is a registered trademark of Bose Corporation in the U.S. and other countries. iPod is a trademark of Apple Inc., registered in the U.S. and other countries. iPhone is a trademark of Apple Inc. All other marks are registered trademarks of Bose Corporation.

Important Safety Instructions

1. **Read these instructions** – for all components before using this product.
2. **Keep these instructions** – for future reference.
3. **Heed all warnings** – on the product and in the owner's guide.
4. **Follow all instructions.**
5. **Do not use this apparatus near water or moisture** – Do not use this product near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, near a swimming pool, or anywhere else that water or moisture are present.
6. **Clean only with a dry cloth** – and as directed by Bose Corporation. Unplug this product from the wall outlet before cleaning.
7. **Do not block any ventilation openings. Install in accordance with the manufacturer's instructions** – To ensure reliable operation of the product and to protect it from overheating, put the product in a position and location that will not interfere with its proper ventilation. For example, do not place the product on a bed, sofa, or similar surface that may block the ventilation openings. Do not put it in a built-in system, such as a bookcase or a cabinet that may keep air from flowing through its ventilation openings.
8. **Do not install near any heat sources, such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.**
9. **Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.**
10. **Only use attachments/accessories specified by the manufacturer.**
11. **Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.**
12. **Unplug this apparatus during lightning storms or when unused for long periods of time** – to prevent damage to this product.
13. **Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way: such as power supply cord or plug is damaged; liquid has been spilled or objects have fallen into the apparatus; the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped** – Do not attempt to service this product yourself. Opening or removing covers may expose you to dangerous voltages or other hazards. Please call Bose to be referred to an authorized service center near you.
14. **To prevent risk of fire or electric shock, avoid overloading wall outlets, extension cords, or integral convenience receptacles.**
15. **Do not let objects or liquids enter the product** – as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock.
16. **See product enclosure for safety related markings.**
17. **Use proper power sources** – Plug the product into a proper power source, as described in the operating instructions or as marked on the product.



Information about products that generate electrical noise

If applicable, this equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, this is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the antenna in the device receiving the interference.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a different circuit than the one to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This product complies with the Canadian RSS-310 Class B specification.

Your new SoundDock® Series II

Congratulations on your choice of the SoundDock® Series II digital music system from Bose.

 
Designed specifically to work with your iPod, this system provides high-quality audio performance that invites your music to come out and play. Don't be surprised if it attracts a wide audience of people who love the sound.

With the SoundDock Series II digital music system, you get:

- Full compatibility with most iPod models.
- Ability to connect other types of audio devices.
- Remote control of your iPod navigation functions while it is docked in the system.
- Recharging of the iPod battery when it is docked in the system.

Unpacking


Check the carton for all of the parts shown.

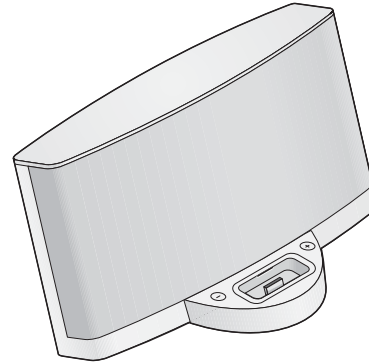


SoundDock Series II
digital music system



 Remote
control

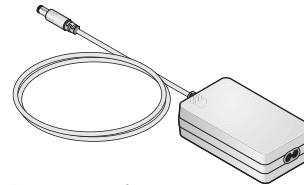

Power pack

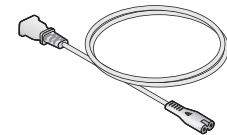 


Power cord

Placement and power connections

Place the SoundDock® Series II digital music system on a firm and level surface. The system will not cause interference if it is placed near a computer or video screen. Connect the system to power as shown below.

 1. On the back of the system, insert the round plug into **DC POWER**.
2. Insert the small end of the power cord into the connector on the power pack.
3. Plug the other end of this cord into a wall outlet.

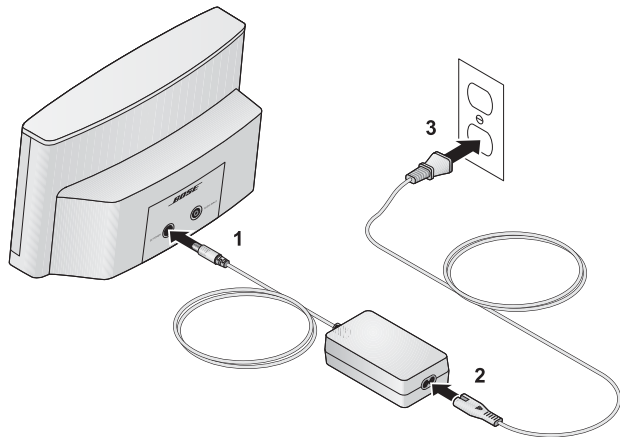


Playing your iPod

Your SoundDock system is ready to go as soon as you plug it in.

1. Set your iPod to play, then firmly insert it into the dock.
2. To adjust the SoundDock system volume, press **Volume Up (+)** or **Down (-)**, located on the dock.

 When the volume reaches maximum or minimum, a green light under the front grille flashes several times.

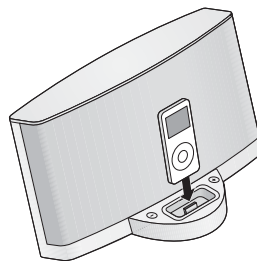


The navigation controls on your iPod are fully functional while it is docked in the system.

When headphones are plugged into your iPod:


- Sound comes from both the headphones and SoundDock.
- The iPod volume control changes the headphone volume only. It does not change the SoundDock system volume.



 Using the remote

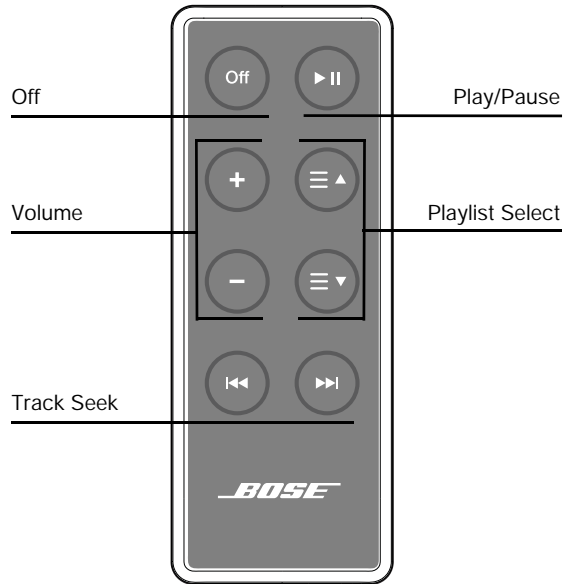
The remote controls the system volume and your iPod as you move around the room. (The remote *does not* control any device connected to AUDIO INPUT.)






Each time you press a button on the remote, a green light under the front grille briefly flashes. Touch any button (except Off) to turn on the SoundDock system.


-  To turn off both your iPod and the SoundDock system, press Off.

-  To adjust the SoundDock volume, press Volume Up (+) or Down (-). For faster adjustment, press and hold.
-  When the volume reaches maximum or minimum, a green light under the front grille flashes several times.

-  To return to the beginning of a track, press Track Seek (back) once. To quickly scan backward through a track, press and hold. To skip to the beginning of the previous track, press twice.

-  To skip to the next track, press Track Seek (forward) once. To quickly scan through a track, press and hold.

-  To skip forward to the next playlist, press Playlist Select Forward (up pointer). To skip back to the previous playlist, press Playlist Select Back (down pointer).
- 

 
-  To pause your iPod, press Play/Pause once. To resume play, press again. To let your iPod charge while another audio device plays, press and hold Play/Pause (see page 5 for more information).

Playing a different audio device

You can use another audio device with your SoundDock® Series II digital music system.

1. Set the audio device to slightly below full volume, then plug it into the AUDIO INPUT connector.

Note: The device cable must have a 3.5mm mini plug on the end that plugs into AUDIO INPUT.

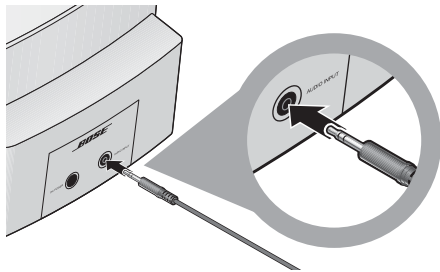


2. To adjust the SoundDock system volume, press **Volume Up (+)** or **Volume Down (-)**.

Note: The SoundDock remote cannot control any device connected to AUDIO INPUT.

Playing a different audio device while charging the iPod

You can charge your iPod while playing another audio device that is plugged into the AUDIO INPUT connector.

 1. Insert your iPod into the dock.
2. Set the audio device to *slightly below* full volume, then plug it into the AUDIO INPUT connector.

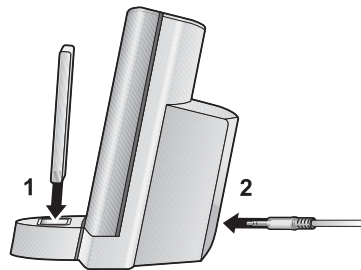


3. To enable the other device to play through the system, press and hold **Play/Pause**.
4. To adjust the SoundDock system volume, press **Volume Up (+)** or **Volume Down (-)**.


Replacing the remote control battery

When the remote stops operating or its range seems reduced, it is time to change the remote battery.

 
1. Using a coin, turn the battery cover slightly counterclockwise.

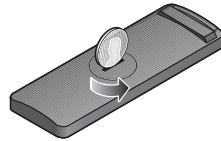

 2. Remove the used battery and replace with a new battery (CR2032 or DL2032). Refer to page ii for battery safety instructions. Be sure the battery is flat side up, with the + symbol in view.

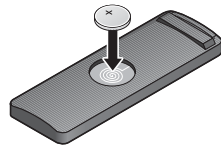

 
3. Reseat the cover and turn it clockwise until it locks into place.

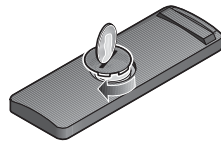

Using an Apple insert

The SoundDock® Series II digital music system features a removable universal insert. This insert can accommodate most iPod models. For a custom fit, use your insert supplied by Apple.

 To remove the universal insert, put your fingernail (as shown) in the slot (or gently use a thin object) and pull up.

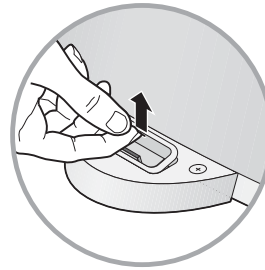

Cleaning the system

Wipe the system using a soft, dry cloth. You can also lightly vacuum the grille.


- Do not use solvents, chemicals, or sprays.
- Do not allow liquids to spill or objects to drop into any openings.


Troubleshooting

The troubleshooting table below should help solve operating problems with your SoundDock® system. However, before proceeding to the troubleshooting table, do the following:

- Remove your iPod from the dock and check for obstructions on the connectors in the dock and on your iPod. Then firmly reseat it in the dock.
- Make sure you have the latest version of software on your iPod.

Problem	What to do
No sound	<ul style="list-style-type: none"> • Make sure the system is plugged in, your iPod or other audio device is turned on, and audio is playing. • Press the Play/Pause button on the remote control. • Increase the volume on the iPod. • Increase the volume on the audio device connected to AUDIO INPUT. • Increase the volume on the SoundDock system. • Remove your iPod from the dock, wait five seconds, then firmly reseat the iPod in the dock. • Unplug the power cord for one minute, then plug it back in. This resets the system (you should hear a tone when the system is powered back on).
Your iPod does not navigate playlists using the remote	<ul style="list-style-type: none"> • Make sure there are no empty playlists on your iPod.

Problem	What to do
<p>Your iPod does not respond to the SoundDock® remote control buttons shown:</p> 	<ul style="list-style-type: none"> • Remove your iPod from the dock, wait five seconds, then firmly reseat the iPod in the dock. • Try the remote from a different location. If it works there, check for interference from bright room lights or sunlight. Wipe off the small lens on the front end of the remote with a clean, dry cloth. • Make sure there is a clear pathway between the remote lens and your SoundDock system. • Remove and reinsert the battery as shown on page 6. • Replace the remote control battery as shown on page 6.
<p>Your SoundDock does not respond to any controls</p>	<ul style="list-style-type: none"> • Unplug the power cord for one minute, then plug it back in. This resets the system (you should hear a tone when the system is powered back on). • Contact your local Bose® dealer about the problem.

 

If your iPod has four buttons above the touch wheel, it is not compatible with the SoundDock Series II digital music system. You can listen to this model iPod when it is docked, but it (the iPod) will not charge.

Warranty

Your SoundDock® Series II digital music system is covered by a transferable limited warranty. See your product registration card for details or look online at www.Bose.com.

Customer Service

For questions about the SoundDock system, contact your local Bose® dealer. To contact Bose directly, see the address list included in the carton.

Technical Information

Power rating

100-240V ~ 50-60Hz, 1.5A, 81-100VA

System size and weight

6.65"H x 11.91"W x 6.48"D (16.89 cm x 30.26 cm x 16.47 cm)

4.56 lb (2.1 kg)

“Made for iPod” means that an electronic accessory has been designed to connect specifically to iPod and has been certified by the developer to meet Apple performance standards.

“Works with iPhone” means that an electronic accessory has been designed to connect specifically to iPhone and has been certified by the developer to meet Apple performance standards.

Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.



310688-0010



BOSE[®]
Better sound through research[®]

©2008 Bose Corporation, The Mountain,
Framingham, MA 01701-9168 USA
AM310688 Rev.01